How to measure for

Honeycomb Blinds



What you'll need:








Inside (reveal) fit

Inside /reveal fitted blinds are mounted inside the window opening.

Measure and use the "tight" measurement for width and drop. Use a metal tape. The factory will make minor deductions required to allow for fitting into the opening.

Measure in 3 places for both the width and the drop, use the smallest measurements.

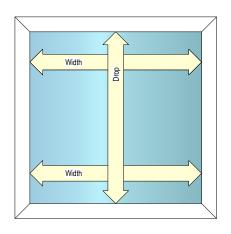

Face (outside) fit

Outside fit blinds are mounted outside the window opening.

Measure the size of the recess, then add a little extra on all sides to ensure adequate coverage. No deductions will be taken off the measurements provided.

