How to install Outdoor Blinds



What you'll need:



Box Knife

Drill


Screw Tip

Before Beginning

Check the order form to ensure you have all the parts required for the type of installation you are undertaking

Make sure the 'Item #' box labels match if multiple panels will be used. This application will have a separate frame box or boxes to match with the 'Item #'



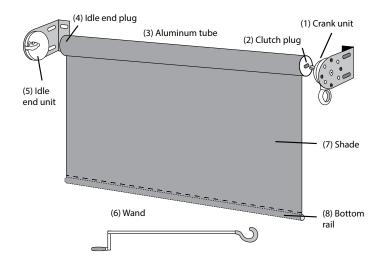

FABRIC WIDTH	SCREW-TO-SCREW MEASUREMENT	OVERALL WIDTH (BRACKET-TO-BRACKET)
48 in. (1.21 m)	48.87 in. (1.24 m)	50.37 in. (1.28 m)
72 in. (1.83 m)	73.25 in. (1.86 m)	74.75 in. (1.9 m)
96 in. (2.44 m)	97.25 in. (2.47 m)	98.75 in. (2.51 m)



1

Mark the holes

Please see next page for 'Remainder steps'

For stock Shades, use the chart to determine

the placement of your screws.

New Zealand's leading online blinds store


nzblinds.co.nz


Install brackets

A. Install the Crank unit and Idle end unit brackets (Fig. 1). The Crank unit bracket will be on the right side, and the Idle end unit bracket should be on the left for standard installation; they cannot be interchanged.

NOTE: Do not tighten screws completely yet.

B. First, insert the Clutch plug into the Crank unit **(Fig. 2)**.

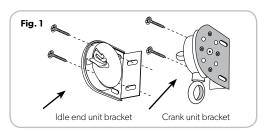

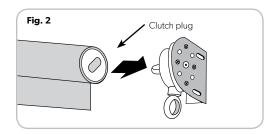


C. sert the Idle end plug into the Idle end unit, and snap the Idle end plug securely into place (Fig. 3). With the Shade in place, adjust the brackets so they fit snugly on each end of the Shade.

IMPORTANT: Now go back and tighten the bracket screws completely.

Your Shade comes standard with the Clutch on the right side of the Shade and ready to be mounted on the inside or outside of your window frame. If you purchased a custom Shade, or intend to keep your Shade with the standard settings, you may skip this section and proceed to the installation instructions. If you want to move the Clutch to the left side of the Shade or you want to hang your Shade from the top of the window (or ceiling), you will need to make a few simple changes to your Shade before proceeding to the installation instructions.

IMPORTANT: The screws included in your hardware kit are for use with wood only. See your

retailer for mounting recommendations when attaching your Shade to any other material.

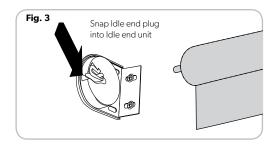

nzblinds.co.nz