

# How to install Vertical Blinds



## What you'll need:



Measuring tape



Level



Box Knife



Drill



P2 Phillips Screw Tip, 100mm Long



#6 Countersink Drill Bit

## Before Beginning


Check the order form to ensure you have all the parts required for the type of installation you are undertaking

Make sure the 'Item #' box labels match if multiple panels will be used. This application will have a separate frame box or boxes to match with the 'Item #'




## Bay Blinds Vertical Blinds steps

- 1 Fit the brackets.** The brackets can be recess fixed (A) wall fixed (B)

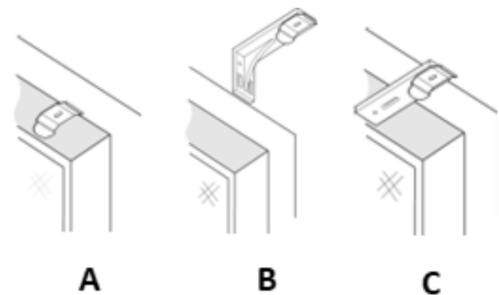

- 2** Brackets should be fitted near each end of the blind and at approx. 1-metre intervals between.

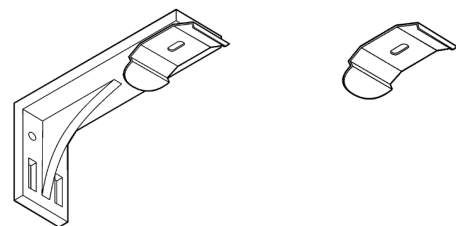

- Please see next page for 'Remainder steps'**


3

### Fit the track

After fixing the brackets to the window, offer the track up to the brackets and hook the top front lip of the track into the front of the brackets. Then rotate the rear of the track upwards & push it back until it locks into place.

**If your blind has chainless sewn in weights** - Attach the blades onto the hooks in the track.

**If your blind has chained weights** - The blades come rolled up in a bundle with a strip of masking tape wrapped around the outside. In between the first and last blades, there is a warning note insert showing where the bundle should be separated when unrolling. Unroll the bundle whilst holding the upper ends of the blades together, & when fully unrolled, attach the blades onto the hooks in the track.

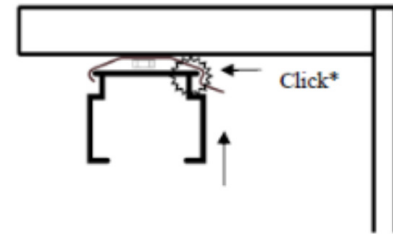

**NOTE:** if the blades are not separated at the correct place, the bottom link chains will become badly tangled & will have to be unclipped & re-attached to the bottom weights.

**Congratulations, the installation of this opening is now complete.**