

How to measure for Venetian Blinds



What you'll need:



Pen/Pencil



Paper




Measuring tape

Inside (reveal) fit

Inside /reveal fitted blinds are mounted inside the window opening.

Measure and use the "tight" measurement for width and drop. Use a metal tape. The factory will make minor deductions required to allow for fitting into the opening.

Measure in 3 places for both the width and the drop, use the smallest measurements.

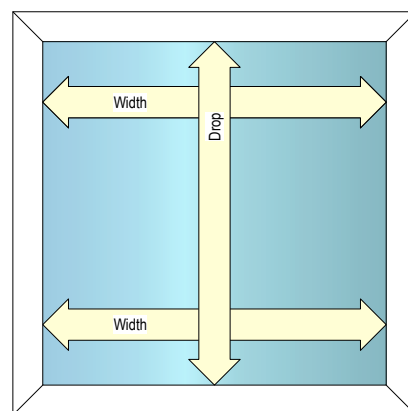

Face (outside) fit

Outside fit blinds are mounted outside the window opening.

Measure the size of the recess, then add a little extra on all sides to ensure adequate coverage. No deductions will be taken off the measurements provided.

NOTE: The "Norman Venetian blinds" are manufactured on Norman's revolutionary Polydeco head-rail design, which includes an innovative built-in light block for enhanced room darkening and a refined finish. There is no extra fascia panel.

Face Fit blinds that are supplied with a fascia panel (NZ manufactured) will come with fascia returns.

